


 




 





 






 

 













 





 
 













 


 









**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	TV		TV/R
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	List		List
	YouTube		Shift + Media
	Vol+		Vol +
	Vol-		Vol -

**Originalfernbedienung    Ersatzfernbedienung**

	Mute		Mute
	[i]		Info
	CH+		Ch +
	CH-		Ch -
	Netflix		Media
	Home		Smart
	*		Menu
	Back		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Exit		Exit
	EPG		Guide
	Zoom		Eject
	≡		Options



