



**Originalfernbedienung Ersatzfernbedienung**

Power	Power		Power
	Open/Close	ZOOM	Eject
On Screen	On Screen	DISPLAY	Info
	1	INFO	1
Repeat	Repeat	REPEAT	Text
	2	TEXT	2
Program	Program	SHIFT + PROG	Shift + Sleep
	3	SLEEP	3
Surround	Surround	DISC NAV	List
	4	LIST	4
Sound	Sound	SHIFT + SOUND	Shift + Dual
	5	DUAL	5
Zoom	Zoom	SHIFT + ZOOM	Shift + Eject
	6	EJECT	6
	7		7
	8		8
	9		9

**Originalfernbedienung Ersatzfernbedienung**

	0		0
Sleep	Sleep	PROG	Sleep
	Sleep	SLEEP	Sleep
Aspect	Aspect	PICTURE	Format
	Aspect	FORMAT	Format
Source	Source	TIMER	AV
	Source	AV	AV
Color Mode	Color Mode	APP	Media
	Color Mode	MEDIA	Media
Break	Break	CLEAR	Exit
	Break	EXIT	Exit
Play	Play	PLAY MODE	Play
	Play	PLAY MODE	Play
<<	<<	<<	<<
	Pause	<<	Pause
Pause	Pause	>>	Pause
>>	>>	>>	>>
I<<	I<<	I<<	I<<
Stop	Stop	STOP	Stop
	Stop	STOP	Stop
>>I	>>I	>>I	>>I
	Top Menu	E-MANUAL	D. Menu
Top Menu	Top Menu	D.MENU	D. Menu
Top Menu	Top Menu	SHIFT + TOP MENU	Shift + Menu
Top Menu	Top Menu	MENU	Shift + Menu
Menu	Menu	TOP MENU	Menu
Menu	Menu	MENU	Menu
Up	Up	UP	Up
	Up	UP	Up





Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Setup		Options
	Return		Back
	Keystone Up		Ch +
	Keystone Down		Ch -
	Visual Setup		Smart
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	0)))/Audio		Dual
	[...]/Subtitle		Subt
	Camera/Angle		3D

Originalfernbedienung Ersatzfernbedienung


