















 
 
 
 

 
 
 
 
 
 
 
 
 
 
 
 
 



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input		AV
	Power Tv		Shift + Power
	Input Tv		Shift + AV
	Tv Vol+		Shift + Vol +
	Tv Vol-		Shift + Vol -
	Tv CH+		Shift + Ch +
	Tv CH-		Shift + Ch -
	Sound Field +		Ch +
	Sound Field -		Ch -
	STD		Options
	Movie		Dual
	Game		Media
	Music		List
	P.Audio		Smart
	Stereo		Subt
	Speaker/Tv↔Audi		TV/R




 
Originalfernbedienung Ersatzfernbedienung

	Display		Info
	Return		Back
	AMP Menu		Menu
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	I<<		I<<
	Pause		Pause
	>>I		>>I
	<<		<<
	Play		Play
	>>		>>





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
 Stop	 Stop
 Pairing	 Pre Ch

Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung

