




Originalfernbedienung Ersatzfernbedienung

	On / Standby		Power
	Input Selector V1		1
	Input Selector V2		4
	Input Selector V3		7
	Input Selector Multi CH		8
	Input Selector		2
	Input Selector		5
	Input Selector Tuner		6
	Input Selector CD		3
	Dimmer		Shift + Mute / Dimmer
	Sleep		Sleep / Timer
	CH/Disc/Album		Shift + CH+ /
	CH/Disc/Album-		Shift + CH- /
	Vol+		Vol+
	Vol-		Vol-
	SP A/B		Zoom / Size
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Muting		Mute / Dimmer
	Left		Left
	Enter		OK
	Right		Right
	Return		Back / Return
	Down		Down
	Setup		Setup / OPT /
	Pause/<		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Stereo		Audio / Lang I/II
	Surround		Eject / Surround
	<		Shift + Left





Originalfernbedienung Ersatzfernbedienung

	>	 + 	Shift + Right
	Test Tone		Sound / Title
	CH Sel		Smart / List
	Level-		CH- / Page-
	Level+		CH+ / Page+
	Display		Display / Media
	OR-EQ		Subtitle / EQ
	L.Night		Exit / Cancel / Clear
	Cine FLTR		TV/Radio /

Originalfernbedienung Ersatzfernbedienung

