


 

 

 

 
 





 
 


 
 
 
 
 



 
 


 





Originalfernbedienung Ersatzfernbedienung

	POWER		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	MENU		Menu
	EXIT		Exit
	V+		Vol +
	V-		Vol -
	MUTE		Mute
	←		Back

Originalfernbedienung Ersatzfernbedienung

	P+		Ch +
	P-		Ch -
	UP		Up
	LEFT		Left
	OK		Ok
	RIGHT		Right
	DOWN		Down
	INFO		Info
	GUIDE		Guide
	TV		TV/R
	RADIO		Shift + TV/R
	RED		Red
	GREEN		Green
	YELLOW		Yellow
	BLUE		Blue
	TXT		Text

