 



 



 




 



 

 
 



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1/2/3 CD		Yellow
	USB		Red
	Tuner		Green
	MP3 Link		Blue
	Dock/PC In		Smart
	Timer/Sleep		AV
	Clock		3D
	Mode		Format
	USB Record		Rec
	USB Delete		Media
	>>		>>
	<<		<<
	>		>>
	<		<<
	Play		Play
	Pause		Pause

 






 
 
 

 


 

 
 
 





 


Originalfernbedienung Ersatzfernbedienung

	Stop		Stop
	Prog		Sleep
	RDS/Display		Info
	ALB/Presets+		Ch +
	ALB/Presets-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Max		Options
	DSC		Dual
	VAC		Subt
	DBB/IS		TV/R



















 
 
 
 
 
 






Originalfernbedienung Ersatzfernbedienung

	Power CD		Power
	Power MP3 Link	 + 	Shift + Power
	1/2/3 CD		Yellow
	USB		Red
	Tuner		Green
	MP3 Link		Blue
	Dock/PC In		Smart
	Timer/Sleep		AV
	Clock		3D
	Mode		Format
	USB Record		Rec
	USB Delete		Media
	>>		>>
	<<		<<
	>		>>
	<		<<
	Play		Play




 

 



 











 

 
Originalfernbedienung Ersatzfernbedienung

	Pause		Pause
	Stop		Stop
	Prog		Sleep
	RDS/Display		Info
	ALB/Preset+		Ch +
	ALB/Preset-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Max		Options
	DSC		Dual
	VAC		Subt
	DBB/IS		TV/R





Originalfernbedienung	Ersatzfernbedienung
	
Power	Power
	
1/2/3 CD	Yellow
	
USB	Red
	
Tuner	Green
	
MP3 Link	Blue
	
Dock/PC In	Smart
	
Timer/Sleep	AV
	
Clock	3D
	
Mode	Format
	
USB Record	Rec
	
USB Delete	Media
	
>>	>>
	
<<	<<
	
>	>>
	
<	<<
	
Play	Play
	
Pause	Pause

Originalfernbedienung	Ersatzfernbedienung
	
Stop	Stop
	
Prog	Sleep
	
RDS/Display	Info
	
ALB/Presets+	Ch +
	
ALB/Presets-	Ch -
	
Vol+	Vol +
	
Vol-	Vol -
	
Mute	Mute
	
Max	Options
	
DSC	Dual
	
VAC	Subt
	
DBB/IS	TV/R






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1/2/3 CD		Yellow
	USB		Red
	Tuner		Green
	MP3 Link		Blue
	Dock/PC In		Smart
	Timer/Sleep		AV
	Mode		Format
	Clock		3D
	USB Record		Rec
	USB Delete		Media
	<<		<<
	>>		>>
	I<		I<<
	Play		Play
	Pause		Pause
	>>		>>

Originalfernbedienung Ersatzfernbedienung

	Stop		Stop
	Prog		Sleep
	RDS/Display		Info
	ALB/Presets+		Ch +
	ALB/Presets-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Max		Options
	DSC		Dual
	VAC		Subt
	DBB/IS		TV/R

