




 















 

 







 



 



 






 








 

 




 

 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Recall		Back
	Audio		Dual
	P.M.		Smart

Originalfernbedienung Ersatzfernbedienung

	Info		Info
	Input		AV
	Up / CH+		Up
	Up / CH+		Ch +
	Down / CH-		Down
	Down / CH-		Ch -
	Right / Vol+ / Enter		Right
	Left / Vol-		Left
	Left / Vol-		Vol -
	Right / Vol+ / Enter		Vol +
	Right / Vol+ / Enter		Ok
	Menu		Menu
	Page+		>>
	Page-		<<
	Display		Shift + Info
	Exit		Exit
	Red		Red





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Size	 Eject
 Stop	 Stop
 Reveal	 TV/R
 Index	 Options
 4:3 / 16:9	 Format
 C.Lock	 Media
 Sub.PG	 Subt
 On/Mix/Off	 Text

Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung

