



Originalfernbedienung Ersatzfernbedienung

TIMER	Timer	SHIFT + SLEEP	Shift + Sleep / Timer
SLEEP	Sleep	SLEEP	Sleep / Timer
MONO TUNER	Mono Tuner	MEDIA DISPLAY	Display / Media
CLOCK	Clock	OPT-TOOLS SETUP	Setup / OPT /
CD EDIT/CHECK	CD Edit/Check	LIST SMART	Smart / List
PRGM	PRGM	PROGRAM TV/RADIO	TV/Radio /
RANDOM/REPEAT	Random/Repeat	SHIFT + APP REPEAT	Shift + Green / APP /
RANDOM/REPEAT	Random/Repeat	SHIFT + Prime Video RANDOM	Shift + Blue / Prime /
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD - STB 3	3
DECK1/2 TAPE	Tape/Deck1/2	NETFLIX SEARCH	Red / Netflix / Search
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
BAND TUNER	Tuner/Band	APP REPEAT	Green / APP / Repeat
7	7	AUX - HDD 7	7

Originalfernbedienung Ersatzfernbedienung

8	8	USB 8	8
9	9	BLUETOOTH 9	9
AUX VIDEO	Video/AUX	YouTube REPEAT A-B	Yellow / YouTube / Repeat
0	0	HDMI - BAT 0	0
+10	+10	GUIDE EPG	Guide / EPG / -/-
CD	CD	Prime Video RANDOM	Blue / Prime Video / Random
Disc Direct Play 1	Disc Direct Play 1	SHIFT + TV 1	Shift + 1
Disc Direct Play 2	Disc Direct Play 2	SHIFT + DVD 2	Shift + 2
Disc Direct Play 3	Disc Direct Play 3	SHIFT + CD - STB 3	Shift + 3
Disc Direct Play 4	Disc Direct Play 4	SHIFT + VIDEO 4	Shift + 4
Disc Direct Play 5	Disc Direct Play 5	SHIFT + TAPE 5	Shift + 5
Disc Direct Play 6	Disc Direct Play 6	SHIFT + TUNER 6	Shift + 6
Disc Direct Play 7	Disc Direct Play 7	SHIFT + AUX - HDD 7	Shift + 7
MANUAL SELECT	Manual Select	OK	OK
DOLBY PRO LOGIC	Dolby Pro Logic	TITLE SOUND	Sound / Title
T-BASS	T-Bass	LANG I/II AUDIO	Audio / Lang I/II
GEQ	GEQ	EQ SUBTITLE	Subtitle / EQ





Originalfernbedienung Ersatzfernbedienung

	Open/Close		Eject / Surround
	Play / Up /		Play / Slow
	Play / Up /		Shift + >> / Preset+
	Play / Up /		Up
	>> / >> / Right / Tuning Up		Right
	>> / >> / Right / Tuning Up		>> / Tune+
	>> / >> / Right / Tuning Up		>> / Preset+
	>> / >> / Right / Tuning Up		Shift + >> /
	Vol+		Vol+
	Pause / Set		Pause / Step / Freeze
	<< / << / Left / Tuning Down		Left
	<< / << / Left / Tuning Down		<< / Tune-
	<< / << / Left / Tuning Down		<< / Preset-
	<< / << / Left / Tuning Down		Shift + << /
	Vol-		Vol-
	Power		Power
	Stop / Down / Clear / Preset-		Down

Originalfernbedienung Ersatzfernbedienung

	Stop / Down / Clear / Preset-		Stop / Hold
	Stop / Down / Clear / Preset-		Shift + << / Preset-
	Stop / Down / Clear / Preset-		Exit / Cancel / Clear

