








 










 










 


 


 


 

 










Originalfernbedienung Ersatzfernbedienung




 
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	EPG		Guide / EPG / -/--
	0		0
	TXT		Text / Goto
	Vol+		Vol+
	Source		AV / Input / RDS
	P+		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	Home		Menu / Home
	P-		CH- / Page-
	*		Smart / List
	Up		Up
	i		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Netflix		Shift + Red / Netflix / Search
	YouTube		Shift + Yellow / YouTube / Repeat A-B
	prime video		Shift + Blue / Prime / Random
	USB		Shift + 8
	Red		Red / Netflix / Search





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	<<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Audio		Audio / Lang I/II

