












































Originalfernbedienung Ersatzfernbedienung

| | | |
|--------------|---|-----------------------|
| On/Off |  | Power |
| Mute |  | Mute / Dimmer |
| Update |  | Play / Slow |
| Reveal |  | Pause / Step / Freeze |
| Txt Stop |  | Stop / Hold |
| Tone- |  | << / Tune- |
| Tone+ |  | >> / Tune+ |
| Contrast- |  | << / Preset- |
| Contrast+ |  | >> / Preset+ |
| Color- S.Std |  | Sound / Title |
| Menu audio |  | Audio / Lang I/II |
| Subt.List |  | Subtitle / EQ |
| 4.# 16:9 |  | Picture / Format |
| Txt Expand |  | Zoom / Size |
| Sleep Timer |  | Sleep / Timer |
| Return TV |  | TV/Radio / |
| Menu video |  | D.Menu / Top |

Originalfernbedienung Ersatzfernbedienung

| | | |
|------------|---|-----------------------|
| Store Text |  | Setup / OPT / |
| Text |  | Text / Goto |
| TV/AV |  | AV / Input / RDS |
| Menu |  | Menu / Home |
| Menu Up |  | Up |
| Info |  | Info / Angle |
| Menu Left |  | Left |
| OK Enter |  | OK |
| Menu Right |  | Right |
| Menu Off |  | Exit / Cancel / Clear |
| Menu Down |  | Down |
| Back |  | Back / Return |
| Volume+ |  | Vol+ |
| Chan.Up |  | CH+ / Page+ |
| Volume- |  | Vol- |
| Display |  | Display / Media |
| Chan.Down |  | CH- / Page- |



| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|-----------------------|---|-----------------------|---|
| 1 |  1 | Level L |  Shift + Left |
| 2 |  2 | Level R/Woofer |  Shift + Right |
| 3 |  3 | Audio+ |  Shift + Vol+ |
| 4 |  4 | | |
| 5 |  5 | | |
| 6 |  6 | | |
| 7 |  7 | | |
| 8 |  8 | | |
| 9 |  9 | | |
| Guide -/-- 1. |  Guide / EPG / -/-- | | |
| 0/10 |  0 | | |
| 2.Fav P/C 2. |  Fav / Marker / PC | | |
| Red |  Red / Netflix / Search | | |
| Green |  Green / APP / Repeat | | |
| Yellow |  Yellow / YouTube / Repeat | | |
| Blue |  Blue / Prime Video / Random | | |
| Nicam/Mono |  Shift + Audio / Lang I/II | | |

