



















 


 

 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Home		Smart
	Home		Menu
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Goto		Guide
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -

Originalfernbedienung Ersatzfernbedienung

	Setup		D. Menu
	Setup	 + 	Shift + Options
	Rec		Rec
	Option		Options
	Timer		Sleep
	Timer	 + 	Shift + AV
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Browser		Media
	Return		Back
	Display		Info
	Audio		Dual
	Subtitle		Subt
	F1	 + 	Shift + 1





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Stop		Stop
	Play		Play
	Pause / Step		Pause
	Slow	 + 	Shift + Pause
	Prev		<<
	FR		<<
	FF		>>
	Next		>>
	Replay	 + 	Shift + Play
	Time Shift		Red
	CM Skip		Green
	DTV / AV		AV
	Repeat		Text
	zoom		3D
	Copy		Yellow
	TV System		TV/R

