














 






 
 

 




 
 







 















 




Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Fav		Pre Ch
	Recall		Back
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	Sleep		Sleep

Originalfernbedienung Ersatzfernbedienung

	TV/Radio		TV/R
	Display		Info
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Menu		Menu
	Exit		Exit
	Mute		Mute
	EPG		Guide
	Home		Smart
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH--		Ch -
	Rec		Rec




 






**Originalfernbedienung Ersatzfernbedienung**

	T.Shift		Media
	Audio		Dual
	Size / Aspect		Format
	Text		Text
	Hold		Shift + Stop
	Reveal		Shift + Pause
	Mouse		Options
	Play / Pause		Play
	Play / Pause		Pause
	Stop		Stop
	Subtitle		Subt
	Index / Reclist		List
	<<		<<
	>>		>>
	I<< / Subpage		I<<
	>>I / Mix		>>I
	Red		Red

**Originalfernbedienung Ersatzfernbedienung**

	Green		Green
	Yellow		Yellow
	Blue		Blue

