

 





 






**Originalfernbedienung Ersatzfernbedienung**

	Standby		Power
	Teletext		Text
	Info		Info
	Transp.		D. Menu
	Clock		Options
	Clear		Exit
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	SV/V+		Media

**Originalfernbedienung Ersatzfernbedienung**

	Timer		AV
	Menu		Menu
	OK		Ok
	Up		Up
	Left		Left
	Right		Right
	Down		Down
	→→		Smart
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	P<P		Pre Ch
	P+		Ch +
	P-		Ch -
	Play		Play
	<<		<<
	Stop		Stop





Originalfernbedienung    Ersatzfernbedienung

	>>		>>
	>I / Index		>>I
	Record / OTR		Rec
	>I< Still		Pause

Originalfernbedienung    Ersatzfernbedienung