




 




 
 
 

 





 
 

 





 

 





**Originalfernbedienung    Ersatzfernbedienung**

|   |             |   |         |
|---|-------------|---|---------|
|    | Power       |    | Power   |
|    | Smart       |    | Smart   |
|    | 1           |    | 1       |
|    | 2           |    | 2       |
|    | 3           |    | 3       |
|    | 4           |    | 4       |
|    | 5           |    | 5       |
|    | 6           |    | 6       |
|    | 7           |    | 7       |
|    | 8           |    | 8       |
|   | 9           |   | 9       |
|  | 0           |  | 0       |
|  | Info        |  | Info    |
|  | Guide       |  | Guide   |
|  | Netflix     |  | Media   |
|  | YouTube     |  | Options |
|  | Google Play |  | 3D      |

**Originalfernbedienung    Ersatzfernbedienung**

|   |             |   |               |
|---|-------------|---|---------------|
|    | prime video |    | Shift + Media |
|    | Home        |    | Shift + Smart |
|    | Menu        |    | Menu          |
|    | Back        |    | Back          |
|    | Exit        |    | Exit          |
|    | Up          |    | Up            |
|    | Down        |    | Down          |
|    | Right       |    | Right         |
|    | Left        |    | Left          |
|    | OK          |    | Ok            |
|   | Vol+        |   | Vol +         |
|  | Vol-        |  | Vol -         |
|  | Mute        |  | Mute          |
|  | CH+         |  | Ch +          |
|  | CH-         |  | Ch -          |
|  | Source      |  | AV            |
|  | Red         |  | Red           |





| Originalfernbedienung   |        | Ersatzfernbedienung   |        | Originalfernbedienung |  | Ersatzfernbedienung |  |
|---|--------|---|--------|-----------------------|--|---------------------|--|
|    | Green  |    | Green  |                       |  |                     |  |
|    | Yellow |    | Yellow |                       |  |                     |  |
|    | Blue   |    | Blue   |                       |  |                     |  |
|    | <<     |    | <<     |                       |  |                     |  |
|    | Play   |    | Play   |                       |  |                     |  |
|    | >>     |    | >>     |                       |  |                     |  |
|    | Rec    |    | Rec    |                       |  |                     |  |
|    | Pause  |    | Pause  |                       |  |                     |  |
|    | Stop   |    | Stop   |                       |  |                     |  |
|   | Text   |   | Text   |                       |  |                     |  |
|  | Subt   |  | Subt   |                       |  |                     |  |
|  | Audio  |  | Dual   |                       |  |                     |  |
|   |        |   |        |                       |  |                     |  |
|   |        |   |        |                       |  |                     |  |
|   |        |   |        |                       |  |                     |  |
|   |        |   |        |                       |  |                     |  |
|   |        |   |        |                       |  |                     |  |
|   |        |   |        |                       |  |                     |  |
|   |        |   |        |                       |  |                     |  |

