
 
 


 


 

 

 
 
 





 
 






 
 







Originalfernbedienung Ersatzfernbedienung


 
 


 

 


 

 
 


 

On/Off		Power
Mute		Mute
Update		Play
Reveal		Pause
Txt Stop		Stop
Subt.List		Subt
Sleep Timer		Sleep
Info		Info
Return TV		TV/R
Menu video		D. Menu
Text		Text
Txt Expand		Eject
TV/AV		AV
Menu		Menu
Menu Up		Up
Display	 + 	Shift + Info
Menu Left		Left

Originalfernbedienung Ersatzfernbedienung





 



 


 

 


OK Enter		Ok
Menu Right		Right
Menu Off		Exit
Menu Down		Down
Back		Back
Volume+		Vol +
Chan.Up		Ch +
Volume-		Vol -
Menu audio		Dual
Chan.Down		Ch -
1		1
2		2
3		3
4		4
5		5
6		6
7		7



Originalfernbedienung Ersatzfernbedienung

8		8
9		9
Guide -/-- 1.		Guide
0/10		0
2.Fav P/C 2.		Pre Ch
Red		Red
Green		Green
Audio-		<<
Audio+		>>
Yellow		Yellow
Game Coo		List
On/Tim		>>
Disp		3D
Off/Tim		<<
Blue		Blue
Mix Scan	 + 	Shift + TV/R
Bright- Sys		Options

Originalfernbedienung Ersatzfernbedienung

Tone-	 + 	Shift + Vol -
Color+ P.Std	 + 	Shift + Format
Tone+	 + 	Shift + Vol +
Store Text	 + 	Shift + Text
Bright+ Mode	 + 	Shift + Menu
Search	 + 	Shift + Up
Tune-	 + 	Shift + Left
Aft/Caf	 + 	Shift + Ok
Tune+	 + 	Shift + Right
Browse		Media
Contrast+	 + 	Shift + Ch +
View		Smart
Contrast-	 + 	Shift + Ch -
Color- S.Std	 + 	Shift + Dual
On Pip	 + 	Shift + 1
Swap	 + 	Shift + 2
4.# 16:9		Format



Originalfernbedienung Ersatzfernbedienung

Still	+	Shift + 4
3.*	+	Shift + Guide
Surround	+	Shift + Red
Nicam/Mono	+	Shift + Green
Level L	+	Shift + Yellow
Level R/Woofers	+	Shift + Blue

Originalfernbedienung Ersatzfernbedienung

