
 
 


 


 

 

 
 
 





 
 






 
 







Originalfernbedienung Ersatzfernbedienung


 
 


 

 


 


 



On/Off		Power
Mute		Mute
Update		Play
Reveal		Pause
Txt Stop		Stop
Subt.List		Subt
Sleep Timer		Sleep
Info		Info
Return TV		TV/R
Menu video		D. Menu
Text		Text
Txt Expand		Eject
TV/AV		AV
Menu		Menu
Menu Up		Up
Display	 + 	Shift + Info
Menu Left		Left

Originalfernbedienung Ersatzfernbedienung



OK Enter		Ok
Menu Right		Right
Menu Off		Exit
Menu Down		Down
Back		Back
Volume+		Vol +
Chan.Up		Ch +
Volume-		Vol -
Menu audio		Dual
Chan.Down		Ch -
1		1
2		2
3		3
4		4
5		5
6		6
7		7




 



 

 

 


Originalfernbedienung Ersatzfernbedienung

8		8
9		9
Guide -/-- 1.		Guide
0/10		0
2.Fav P/C 2.		Pre Ch
Red		Red
Green		Green
Audio-		<<
Audio+		>>
Yellow		Yellow
Game Coo		List
On/Tim		>>
Disp		3D
Off/Tim		<<
Blue		Blue
Mix Scan		Shift + TV/R
Bright- Sys		Options

Originalfernbedienung Ersatzfernbedienung

Tone-		Shift + Vol -
Color+ P.Std		Shift + Format
Tone+		Shift + Vol +
Store Text		Shift + Text
Bright+ Mode		Shift + Menu
Search		Shift + Up
Tune-		Shift + Left
Aft/Caf		Shift + Ok
Tune+		Shift + Right
Browse		Media
Contrast+		Shift + Ch +
View		Smart
Contrast-		Shift + Ch -
Color- S.Std		Shift + Dual
On Pip		Shift + 1
Swap		Shift + 2
4.# 16:9		Format



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Still	 +  Shift + 4		
3.*	 +  Shift + Guide		
Surround	 +  Shift + Red		
Nicam/Mono	 +  Shift + Green		
Level L	 +  Shift + Yellow		
Level R/Woofers	 +  Shift + Blue		

