



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	CBL/SAT	+	Shift + 0
	DVD	+	Shift + 2
	TV Audio	+	Shift + 1
	Blu-ray	+	Shift + 5
	AUX1	+	Shift + 7
	Tuner	+	Shift + 6
	Bluetooth	+	Shift + 9
	Game	+	Shift + Fav / Marker / PC
	AUX2	+	Shift + Guide / EPG / -/-
	Phono	+	Shift + 4
	USB	+	Shift + 8
	Media Player		Display / Media
	CD	+	Shift + 3
	Online Music		Smart / List
	Internet Radio	+	Shift + Smart / List
	CH/Page+		CH + / Page+

Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep / Timer
	Volume+		Vol+
	CH/Page-		CH- / Page-
	Mute		Mute / Dimmer
	Volume-		Vol-
	Eco		D.Menu / Top
	Info		Info / Angle
	Up		Up
	Option	+	Shift + Setup / OPT / Tools
	Left		Left
	Right		Right
	Back		Back / Return
	Down		Down
	Setup		Setup / OPT /
	Home		Menu / Home
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze





Originalfernbedienung Ersatzfernbedienung

	Play		Play / Slow
	I<</Tune-		I<< / Preset-
	I<</Tune-		Shift + << /
	>>I/Tune+		>>I / Preset+
	>>I/Tune+		Shift + >> /
	<<		<< / Tune-
	>>		>> / Tune+
	Smart Select 1		Shift + Red / Netflix /
	Smart Select 2		Shift + Green / APP /
	Smart Select 3		Shift + Yellow / YouTube /
	Smart Select 4		Shift + Blue / Prime
	Green/Movie		Green / APP / Repeat
	Red/Music		Red / Netflix / Search
	Blue/Game		Blue / Prime Video / Random
	Yellow/Pure		Yellow / YouTube / Repeat
	1		1
	2		2

Originalfernbedienung Ersatzfernbedienung

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Enter		OK





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	CBL/SAT	+	Shift + 0
	DVD	+	Shift + 2
	TV Audio	+	Shift + 1
	Blu-ray	+	Shift + 5
	AUX1	+	Shift + 7
	Tuner	+	Shift + 6
	Bluetooth	+	Shift + 9
	Game	+	Shift + Fav / Marker / PC
	AUX2	+	Shift + Guide / EPG / -/-
	Phono	+	Shift + 4
	USB	+	Shift + 8
	Media Player		Display / Media
	CD	+	Shift + 3
	Online Music		Smart / List
	Internet Radio	+	Shift + Smart / List
	CH/Page+		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep / Timer
	Volume+		Vol+
	CH/Page-		CH- / Page-
	Mute		Mute / Dimmer
	Volume-		Vol-
	Up		Up
	Left		Left
	Right		Right
	Back		Back / Return
	Down		Down
	Home		Menu / Home
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	I<</Tune-	+	Shift + << /
	I<</Tune-		I<< / Preset-
	>>I/Tune+		>>I / Preset+





Originalfernbedienung Ersatzfernbedienung

TUNE +	>>/Tune+	SHIFT + TUNE+	Shift + >> /
	<<	TUNE-	<< / Tune-
	>>	TUNE+	>> / Tune+
1	Smart Select 1	NETFLIX SEARCH	Red / Netflix / Search
2	Smart Select 2	APP REPEAT	Green / APP / Repeat
3	Smart Select 3	YouTube REPEAT A-B	Yellow / YouTube / Repeat
4	Smart Select 4	Prime Video RANDOM	Blue / Prime Video / Random
1	1	TV	1
2	2	DVD	2
3	3	CD - STB	3
4	4	VIDEO	4
5	5	TAPE	5
6	6	TUNER	6
7	7	AUX - HDD	7
8	8	USB	8
9	9	BLUETOOTH	9
0	0	HDMI - BAT	0







 




 



Originalfernbedienung Ersatzfernbedienung

ENTER	Enter	OK	OK





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	CBL/SAT		Shift + 0
	DVD		Shift + 2
	TV Audio		Shift + 1
	Blu-ray		Shift + 5
	AUX1		Shift + 7
	Tuner		Shift + 6
	Bluetooth		Shift + 9
	Game		Shift + Fav / Marker / PC
	AUX2		Shift + Guide / EPG / -/-
	Phono		Shift + 4
	USB		Shift + 8
	Media Player		Display / Media
	CD		Shift + 3
	Online Music		Smart / List
	Internet Radio		Shift + Smart / List
	CH/Page+		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep / Timer
	Volume+		Vol+
	CH/Page-		CH- / Page-
	Mute		Mute / Dimmer
	Volume-		Vol-
	Up		Up
	Left		Left
	Right		Right
	Back		Back / Return
	Down		Down
	Home		Menu / Home
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	I<</Tune-		Shift + << /
	I<</Tune-		I<< / Preset-
	>>I/Tune+		>>I / Preset+

 





Originalfernbedienung Ersatzfernbedienung

	>>/Tune+	 + 	Shift + >> /
	<<		<< / Tune-
	>>		>> / Tune+
	Smart Select 1		Red / Netflix / Search
	Smart Select 2		Green / APP / Repeat
	Smart Select 3		Yellow / YouTube / Repeat
	Smart Select 4		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

	Enter		OK

