 

 

 

 

 

 
 
 




 

 
 







 

 

 













 

 
 



 
 
 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|--------|
|  | Power |  | Power |
|  | Mute |  | Mute |
|  | UHF |  | Smart |
|  | Pause |  | Pause |
|  | EPG |  | Guide |
|  | A-Z |  | Media |
|  | FAV |  | Pre Ch |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------------|---|--------|
|  | TV/Radio |  | TV/R |
|  | Menu |  | Menu |
|  | Back |  | Back |
|  | Exit |  | Exit |
|  | Info |  | Info |
|  | Up / CH+ |  | Up |
|  | Up / CH+ |  | Ch + |
|  | Down / CH- |  | Down |
|  | Down / CH- |  | Ch - |
|  | Right / Vol+ |  | Right |
|  | Right / Vol+ |  | Vol + |
|  | Left / Vol- |  | Left |
|  | Left / Vol- |  | Vol - |
|  | OK |  | Ok |
|  | Red / FTA/CAS |  | Red |
|  | Green / SAT |  | Green |
|  | Yellow / TV/SAT |  | Yellow |



