



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Review		Smart / List
	Left/ <</-		Left
	Left/ <</-		<< / Preset-
	Right/ >>/+		Right
	Right/ >>/+		>> / Preset+
	Tv/VCR		AV / Input / RDS
	---		Exit / Cancel / Clear
	Audio		Audio / Lang I/II
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

Originalfernbedienung Ersatzfernbedienung

	X		Back / Return
	9		9
	0		0
	Timer		Sleep / Timer
	PR+		CH+ / Page+
	Start Debut +		Green / APP / Repeat
	Start Debut -		Red / Netflix / Search
	Stop Fin +		Blue / Prime Video / Random
	PR-		CH- / Page-
	Stop Fin -		Yellow / YouTube / Repeat
	Date-		Vol-
	Date+		Vol+
	Prog		TV/Radio /
	<<		<< / Tune-
	30 Sec/>>>		Display / Media
	Timer/?		Shift + Sleep / Timer
	Play		Play / Slow



