


 


 

 

 






 





 
 


 


 
 
 



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
POWER		Power	
SOURCE		AV	
EXIT		Exit	
MENU		Menu	
MUTE		Mute	
Q. MENU		Options	
TEXT		Text	
OK		Ok	
UP		Up	
DOWN		Down	
RIGHT		Right	
LEFT		Left	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
0		0	
EPG		Guide	
FOLDER		List	
V+		Vol +	
V-		Vol -	
P+		Ch +	
P-		Ch -	
SLEEP		Sleep	
BACK		Back	
PRESETS		D. Menu	
SUB / LANG.		Format	
RED / ZOOM		Red	
GREEN /		Green	

REPEAT



[illegible]