








 

 

 



 





 
 




 

 




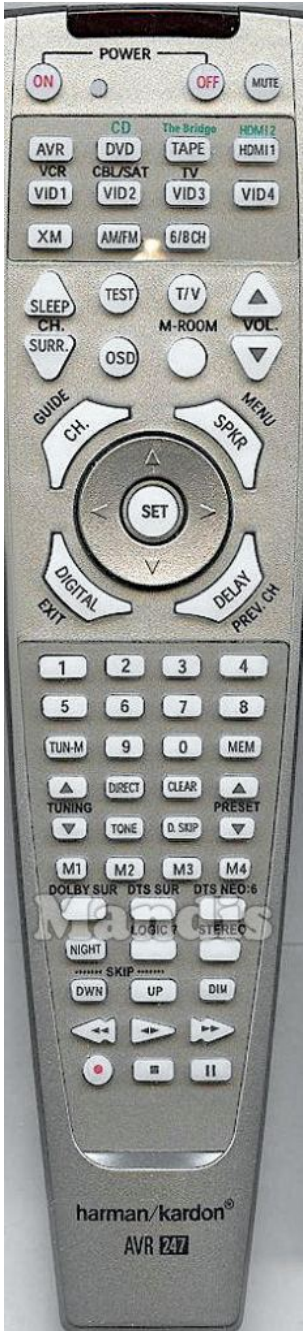 

**Originalfernbedienung Ersatzfernbedienung**

	Power On		Power
	Power Off		Shift + Power
	Mute		Mute
	AVR		Shift + 1
	DVD		Shift + 2
	Tape		Shift + 3
	HDMI 1		Shift + 4
	VID 1 / VCR		Shift + 5
	VID 2 / CBL/SAT		Shift + 6
	VID 3 / TV		Shift + 7
	VID 4		Shift + 8
	AM/FM		Shift + 0
	6/8 CH.		Shift + Pre Ch
	Sleep / CH +		Shift + Ch +
	Sleep / CH +		Sleep
	SURRE. / CH -		Shift + Ch -
	Test		Text

**Originalfernbedienung Ersatzfernbedienung**

	OSD		D. Menu
	M-Room		Options
	Vol +		Vol +
	Vol -		Vol -
	CH / Guide		Guide
	SPKR / Menu		Menu
	Up		Up
	Left		Left
	Set		Ok
	Right		Right
	Down		Down
	Digital / Exit		Exit
	Delay / Prev. CH		Pre Ch
	1		1
	2		2
	3		3
	4		4





Originalfernbedienung Ersatzfernbedienung

	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tun-M		Smart
	MEM		Media
	Tuning +		Shift + Up
	Tuning -		Shift + Down
	Direct		Info
	Tone		List
	Clear		Shift + Exit
	Preset +		Ch +
	Preset -		Ch -
	Dolby SUR		Red
	DTS SUR		Green

Originalfernbedienung Ersatzfernbedienung

	DTS NEO:6		Yellow
	Logic 7		Blue
	Stereo		Shift + Red
	Night		Shift + Sleep
	DIM		AV
	<<		<<
	Play / Play		Play
	>>		>>
	Rec		Rec
	Stop		Stop

