




































 







Originalfernbedienung Ersatzfernbedienung

PWR On/Off		Power
Mute		Mute / Dimmer
App		Shift + Green / APP /
Info		Info / Angle
Subt.List		Subtitle / EQ
TV		TV / Radio /
Video		Shift + 4
Text		Text / Goto
Zoom		Zoom / Size
Menu		Menu / Home
TV/SAT		AV / Input / RDS
Menu Up		Up
Display		Display / Media
Menu Left		Left
OK Enter		OK
Menu Right		Right
Exit		Exit / Cancel / Clear

Originalfernbedienung Ersatzfernbedienung

Menu Down		Down
Back		Back / Return
Volume+		Vol+
CH/Page+		CH+ / Page+
Volume-		Vol-
Audio		Audio / Lang I/II
CH/Page-		CH- / Page-
1. ?		1
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7
8tuv		8
9wxyz		9
Guide Pilote		Guide / EPG / -/-



	Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	0/10			0
	FAV Pref.			Fav / Marker / PC
	Red			Red / Netflix / Search
	Green			Green / APP / Repeat
	Yellow			Yellow / YouTube / Repeat
	Blue			Blue / Prime Video / Random
	Dec/Pause			Pause / Step / Freeze
	SAT Sky			Smart / List
				>>  / Preset+
				<< / Preset-

