



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Pre Ch
	Recall		Back
	Lang		Dual
	Time Shift		Smart
	Tv/Radio		TV/R

Originalfernbedienung Ersatzfernbedienung

	Dev.List		List
	Video		Guide
	Subtitle		Subt
	Text		Text
	Auto		Options
	Menu		Menu
	Zoom		Eject
	Info		Info
	Exit		Exit
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Vol+		Vol +





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	VOL -		Vol -
	FILELIST		Media
	REC		Rec
	■		Stop
	▶		Play
	⏸		Pause
	⏩		<<
	⏪		>>
	⏪■		I<<
	■⏩		>>I
	Red/FAV/Daily		Red
	Green/DEL/Weekl		Green
	Yellow/Movie/P.Inf		Yellow
	Blue/Lock/Timer		Blue

