



Originalfernbedienung Ersatzfernbedienung




 

 

 
 
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Pre Ch
	Recall		Back
	Lang		Dual
	Time Shift		Smart
	Tv/Radio		TV/R

Originalfernbedienung Ersatzfernbedienung

	Dev.List		List
	Video		Guide
	Subtitle		Subt
	Text		Text
	Auto		Options
	Menu		Menu
	Zoom		Eject
	Info		Info
	Exit		Exit
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Vol+		Vol +





	Originalfernbedienung	Ersatzfernbedienung		Originalfernbedienung	Ersatzfernbedienung
	Vol-		Vol -		
	Filelist		Media		
	Rec		Rec		
	Stop		Stop		
	Play		Play		
	Pause		Pause		
	<<		<<		
	>>		>>		
	<<		<<		
	>>		>>		
	Red/FAV/Daily		Red		
	Green/DEL/Weekl		Green		
	Yellow/Movie/P.Inf		Yellow		
	Blue/Lock/Timer		Blue		

