



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|----------------------------|
|  | On / Off |  | Power |
|  | Mute All |  | Shift + Mute / Dimmer |
|  | Mute |  | Mute / Dimmer |
|  | Stored |  | Smart / List |
|  | CD - DVD |  | Shift + 2 |
|  | FM - AM |  | Shift + TV/Radio / Program |
|  | AUX |  | Shift + 7 |
|  | TV |  | TV/Radio / |
|  | CBL - SAT |  | Eject / Surround |
|  | VCR |  | Shift + 4 |
|  | Library |  | Shift + Display / Media |
|  | Up / Tune + |  | Up |
|  | DVD Menu |  | D.Menu / Top |
|  | Settings |  | Setup / OPT / |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------------|---|-----------------------------|
|  | Guide |  | Guide / EPG / -/-- |
|  | System |  | Text / Goto |
|  | Down / Tune - |  | Down |
|  | Exit |  | Exit / Cancel / Clear |
|  | Track/Chap./CH + |  | CH+ / Page+ |
|  | Volume + |  | Vol+ |
|  | Track/Chap./CH - |  | CH- / Page- |
|  | Volume - |  | Vol- |
|  | Stop |  | Stop / Hold |
|  | Pause |  | Pause / Step / Freeze |
|  | Play |  | Play / Slow |
|  | I<< Seek |  | I<< / Preset- |
|  | I>>I Seek |  | I>>I / Preset+ |
|  | Shuffle |  | Blue / Prime Video / Random |
|  | Repeat |  | Green / APP / Repeat |
|  | 1 |  | 1 |
|  | 2 |  | 2 |



