

















 

 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Tv/Radio		TV/Radio /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Subtitle		Subtitle / EQ
	Text		Text / Goto
	Hold	 + 	Shift + Stop /
	TVG		Guide / EPG / -/--
	Audio		Audio / Lang I/II
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Size		Zoom / Size
	<<		<< / Tune-
	Subpage		Eject / Surround
	>>		>> / Tune+

Originalfernbedienung Ersatzfernbedienung

	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	I<<		I<< / Preset-
	FAV		Fav / Marker / PC
	>>I/Index		>>I / Preset+
	Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Aspect		Picture / Format
	Vol+		Vol+
	Mute		Mute / Dimmer
	CH+		CH+ / Page+





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Vol-		Vol-				
	Display		Display / Media				
	CH-		CH- / Page-				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	-/--		Shift + Guide / EPG / -/--				
	0		0				
	Recall		Back / Return				

