





 

 










Originalfernbedienung Ersatzfernbedienung

	Off		Shift + Power
	On		Power
	Mute		Mute / Dimmer
	AVR		Smart / List
	DVD		Shift + 2
	CD		Shift + 3
	Tape		Shift + 5
	VID1/VCR		Shift + 4
	VID2/TV		Shift + 1
	VID3/CBL/SAT		Shift + 0
	VID4		Shift + 7
	AM/FM		Shift + 6
	6 CH		Shift + 8
	Sleep		Sleep / Timer
	Test		Text / Goto
	Vol+		Vol+
	Surr.		Eject / Surround



































Originalfernbedienung Ersatzfernbedienung

	Night		TV/Radio /
	M-Room		Zoom / Size
	Vol-		Vol-
	CH.		Info / Angle
	Up		Up
	SPKR/Menu		Menu / Home
	Left		Left
	Set		OK
	Right		Right
	Digital		D.Menu / Top
	Down		Down
	Delay/Normal		Setup / OPT /
	1		1
	2		2
	3		3
	4		4
	5		5







 


















 












Originalfernbedienung Ersatzfernbedienung

	Power Off		Shift + Power
	Power On		Power
	Vol+		Vol+
	Night		TV/Radio /
	[≡] / M-Room		Zoom / Size
	Vol-		Vol-
	CH.		Info / Angle
	Up		Up
	SPKR/Menu		Menu / Home
	Left		Left
	Set		OK
	Right		Right
	Digital/Exit		D.Menu / Top
	Down		Down
	Delay/Normal		Setup / OPT /
	1		1
	2		2

Originalfernbedienung Ersatzfernbedienung

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	Tun-M		Red / Netflix / Search
	9		9
	0		0
	Mem		Green / APP / Repeat
	Direct		Back / Return
	Clear		Exit / Cancel / Clear
	Preset ▲		Shift + >>I / Preset+
	RDS		AV / Input / RDS
	Preset ▼		Shift + I<< / Preset-
	<<		<< / Tune-
	Play		Play / Slow





Originalfernbedienung Ersatzfernbedienung

	Power On		Power
	Power Off		Shift + Power
	Vol-		Vol-
	Vol+		Vol+
	SPKR/Menu		Menu / Home
	1		1
	Delay/Normal		Setup / OPT /
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tun-M		Red / Netflix / Search

Originalfernbedienung Ersatzfernbedienung

	Mem		Green / APP / Repeat
	RDS		AV / Input / RDS
	>>		>> / Tune+
	<<		<< / Tune-
	Play		Play / Slow
	Stop		Stop / Hold
	Direct		Back / Return
	Pause		Pause / Step / Freeze
	Preset ▲		CH+ / Page+
	>>		>> / Preset+
	<<		<< / Preset-
	Power (On/Off)		Mute / Dimmer
	PR+ VCR		Shift + CH+ /
	PR- VCR		Shift + CH- /
	Vol- VCR		Shift + Vol-
	Vol+ VCR		Shift + Vol+
	1 VCR		Shift + 1



