
 


 

 
 
 



 

 



 
 


 





 







 
 

 



Originalfernbedienung Ersatzfernbedienung

On/Off		Power
Audio Off		Mute
Slow Down		Ch -
Slow Up		Ch +
Pause		Pause
Auto/Track		Smart
Stop		Stop
Subt.		Subt
Title		List
Rep/A-B		TV/R
Pepeat/1/All		Text
Zoom		Shift + Eject
DVD/TV		AV
Menu		Menu
Menu Up		Up
Display		Info
Return		Back

Originalfernbedienung Ersatzfernbedienung






 

 

 
 



Menu Left		Left
OK Enter		Ok
Progr.		Sleep
Next		>>
Menu Right		Right
Prev.		<<
Menu Down		Down
Volume+		Vol +
Volume-		Vol -
Top Menu		D. Menu
1		1
2		2
3		3
4		4
5		5
Store		Red
6		6



 

 

 


 









Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Digest		Angle	 Format
7		Np	 +  Shift + Subt
Open/Close		Info	 +  Shift + Info
8			
9			
Clear/00:00			
+10			
Record			
Auto Scan			
Rewind			
Play			
F.Forward			
Setup			
Audio			
3D			
0			
C/CH			




 
 
 

 
 

 
 
 
Originalfernbedienung Ersatzfernbedienung

On/Off		Power
Audio Off		Mute
Stop		Stop
Pause		Pause
Slow Up		Ch +
Slow Down		Ch -
Subt.		Subt
Auto/Track		Sleep
Rep/A-B		TV/R
Zoom	 + 	Shift + Eject
Title		List
Pepeat/1/All		Text
DVD/TV		AV
Menu		Menu
Menu Up		Up
Display		Info
Menu Left		Left

Originalfernbedienung Ersatzfernbedienung


 




 
 



 



 

OK Enter		Ok
Menu Right		Right
Return		Exit
Menu Down		Down
Progr.		Back
Volume+		Vol +
Top Menu		D. Menu
Next		>>I
Volume-		Vol -
1		1
2		2
3		3
Prev.		I<<
4		4
5		5
6		6
7		7



 

 
 
 





 




 

Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
8			8				
Video			Smart				
9			9				
+10			Guide				
0			0				
C/CH			Pre Ch				
Rewind			<<				
Random			Media				
Angle			Format				
R/L		 + 	Shift + Info				
Play			Play				
Record			Rec				
F.Forward			>>				
3D			3D				
Open/Close			Eject				
Audio			Dual				



Originalfernbedienung Ersatzfernbedienung




 



On/Off		Power
Audio Off		Mute
Slow Down		Ch -
Slow Up		Ch +
Auto/Track		Smart
Stop		Stop
Subt.		Subt
Pause		Pause
Zoom		Shift + Eject
Title		List
Rep/A-B		TV/R
Pepeat/1/All		Text
DVD/TV		AV
Menu		Menu
Menu Up		Up
Display		Info
Menu Left		Left

Originalfernbedienung Ersatzfernbedienung


 

 
OK Enter		Ok
Menu Right		Right
Return		Back
Menu Down		Down
Next		>>
Progr.		Sleep
Volume+		Vol +
Top Menu		D. Menu
Volume-		Vol -
Prev.		<<
1		1
2		2
3		3
4		4
5		5
6		6
7		7



Originalfernbedienung Ersatzfernbedienung

8		8
Open/Close		Eject
Mode		Media
9		9
Setup		Options
+10		Guide
3D		3D
0		0
C/CH		Pre Ch
Play/Back	 + 	Shift + Left
Resume	 + 	Shift + Play
Play		Play
Karaoke/Step	 + 	Shift + Pause
Np	 + 	Shift + Subt
Record		Rec
F.Forward		>>
Rewind		<<

Originalfernbedienung Ersatzfernbedienung

Store	 + 	Shift + Down
Angle		Format
Lang		Dual

