
 

 

 



 
 
 
 
 



 

 







 
 
 
 





 

 
 




 






 



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off		Power	
Audio Out		Mute	
Slow Down		TV/R	
F.Adv		List	
Stop		Stop	
Auto/Track		Options	
Pause		Pause	
Sp/Lp/Speed		3D	
Slow/Dpss-		Shift + Ch -	
Mon/TV		Smart	
Video/Go-To		D. Menu	
VCR/TV		Media	
Menu		Menu	
Slow/Dpss+		Shift + Ch +	
Menu Up		Up	
Display		Info	
Menu Left		Left	
OK Enter		Ok	
Menu Right		Right	
Exit		Exit	
Menu Down		Down	
T.Set/Clock		Red	
Tracking+		Vol +	
Next		>>	
Tracking-		Vol -	
Audio		Dual	
Prev.		<<	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	



Originalfernbedienung Ersatzfernbedienung

8		8
9		9
-/--		Guide
0		0
Progr/C/CH		Pre Ch
On/Off		Shift + Power
Record		Rec
Rewind		<<
Input Source		AV
Next Sv+V		Subt
F.Forward		>>
Vps/Pdc		Format
Play		Play
Count Remain		Yellow
Set+		Shift + Vol +
Counter/Memor		Blue
Frame Down		Text

Originalfernbedienung Ersatzfernbedienung

Info/Intro		Shift + Info
Counter Clock		Green
Timer/Sleep		Sleep
Chan-		Ch -
Set-		Shift + Vol -
Chan+		Ch +
Eject/Reverse		Eject
Audio Dub		Shift + Red
Encode		Shift + Green
X2 Rew/Play		Shift + Yellow
P.Back/R.+Play		Shift + Blue

