
 













 





 



 














Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	Red		Red / Netflix / Search
	4		4
	5		5
	6		6
	Green		Green / APP / Repeat
	7		7
	8		8
	9		9
	Yellow		Yellow / YouTube / Repeat
	Recall		Back / Return
	0		0
	Display		Display / Media
	Blue		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

	P.Mode		Picture / Format
	Text		Text / Goto
	CH+		CH+ / Page+
	CH+		Up
	Vol-		Vol-
	Vol-		Left
	Menu		Menu / Home
	Vol+		Vol+
	Vol+		Right
	CH-		Down
	CH-		CH- / Page-
	S.Mode		Sound / Title
	Mute		Mute / Dimmer
	Zoom / Sub		Zoom / Size
	Still		Pause / Step / Freeze
	Lang		Audio / Lang I/II
	Video / Index		Info / Angle



