
 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV/R		TV/R
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Pre Ch
	SAT		Smart
	Page+		Ch +
	Page-		Ch -

Originalfernbedienung Ersatzfernbedienung

	Timer		AV
	Sub		Subt
	Vol+		Vol +
	Vol-		Vol -
	Display		Info
	Mode		List
	Menu		Menu
	Exit		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Back		Back
	Help		D. Menu
	Red / Audio		Red
	Red / Audio		Dual





**Originalfernbedienung   Ersatzfernbedienung**

Green / Pause	Green
Green / Pause	SHIFT +  Shift + Pause
Yellow / Zoom	Yellow
Yellow / Zoom	Eject
Blue / Info	Blue
Blue / Info	SHIFT +  Shift + Info
Mouse	Options
EPG	Guide
Format	
Find	SHIFT +  Shift + TV/R
F1	SHIFT +  Shift + 1
TXT	Text
<<	<<
Play	Play
>>	>>
Pause	Pause
Stop	Stop

**Originalfernbedienung   Ersatzfernbedienung**

USB	Media
Rec	Rec

