
























 

 















Originalfernbedienung Ersatzfernbedienung

On/Off		Power
3.*	 + 	Shift + 3
Store		Setup / OPT /
Reveal		Play / Slow
On/Off	 + 	Shift + Power
Tune+		>> / Tune+
Tune-		<< / Tune-
4		4
5		5
6		6
7		7
8		8
9		9
Guide -/-- 1.		Guide / EPG / -/--
0/10		0
2.Fav P/C 2.		Fav / Marker / PC
Red		Red / Netflix / Search

Originalfernbedienung Ersatzfernbedienung

Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random
Tone-		I<< / Preset-
Tone+		>>I / Preset+
3		3
Audio+	 + 	Shift + Vol+
Search	 + 	Shift + Red / Netflix /
4.# 16:9		Picture / Format
Surround		Eject / Surround
Nicam/Mono	 + 	Shift + Audio / Lang I/II
Level L	 + 	Shift + Left
Level R/Woofer	 + 	Shift + Right
Display		Display / Media
Mute		Mute / Dimmer
Txt Stop		Stop / Hold
Info		Info / Angle



**Originalfernbedienung** **Ersatzfernbedienung**

Subt.List		Subtitle / EQ
Sleep Timer		Sleep / Timer
Return TV		TV/Radio /
Menu video		D.Menu / Top
Text		Text / Goto
Txt Expand		Zoom / Size
TV/AV		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
Menu Left		Left
OK Enter		OK
Menu Right		Right
Menu Off		Exit / Cancel / Clear
Menu Down		Down
Back		Back / Return
Volume+		Vol+
Chan.Up		CH+ / Page+

**Originalfernbedienung** **Ersatzfernbedienung**

Volume-		Vol-
Menu audio		Audio / Lang I/II
Chan.Down		CH- / Page-
1		1
2		2

