













 

 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Display		Info
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

	Subpage		Media
	Pre-CH		Pre Ch
	PC		Smart
	Tv/Video		TV/R
	Sleep		Sleep
	Sound		Dual
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Menu		Menu
	Mix		AV
	Teletext		Text
	Text Size		Format
	Red		Red
	Green		Green
	Yellow		Yellow





Originalfernbedienung **Ersatzfernbedienung**

	Blue		Blue
	Index		List
	Subtitle		Subt
	Hold		D. Menu
	Reveal		Options
	PIP/POP		3D
	PIP Swap		Back
	PIP Size		Eject

Originalfernbedienung **Ersatzfernbedienung**

