






 







 
 

 


 
















Originalfernbedienung Ersatzfernbedienung



	Power		Power
	VIDEO		1
	TV		2
	TAPE / MD		3
	CD		4
	TUNER		5
	PHONO		6
	TAPE2 / MD		7
	Preset-		Ch -
	Preset+		Ch +
	TUNER Shift		Media
	Play CD		Play
	Pause CD		Pause
	Stop CD		Stop
	I<< CD		I<<
	>>I CD		>>I
	D.Skip CD		List

Originalfernbedienung Ersatzfernbedienung

	Play MD		Shift + Play
	Pause MD		Shift + Pause
	Stop MD		Shift + Stop
	I<< MD		Shift + I<<
	>>I MD		Shift + >>I
	Rev. Play Tape Deck A		Left
	Play Tape Deck A		Right
	Stop Tape Deck A		Ok
	<< Tape Deck		<<
	>> Tape Deck		>>
	Rev. Play Tape Deck B		Shift + Left
	Play Tape Deck B		Shift + Right
	Stop Tape Deck B		Shift + Ok
	<< Tape Deck		Shift + <<
	>> Tape Deck		Shift + >>
	Bass Boost		Smart
	Muting		Mute





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Vol+		Vol +				
	Vol-		Vol -				

