


Originalfernbedienung Ersatzfernbedienung

	Power On		Power
	Power Off		Shift + Power
	Mute		Mute
	Stereo		Shift + Dual
	Cable/Sat		Green
	TV		Blue
	CD		Yellow
	Menu		Menu
	Harman Volume		Smart
	Exit		Exit
	Tone Control		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	1		1

Originalfernbedienung Ersatzfernbedienung

	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Shift + Exit
	Direct		Guide
	Vol+		Vol +
	Vol-		Vol -
	CH/Tuner Up		Ch +
	CH/Tuner Down		Ch -
	Speaker 1		Options
	Speaker 2		Dual





Originalfernbedienung Ersatzfernbedienung

	Power On		Power
	Power Off		Shift + Power
	Mute		Mute
	Stereo		Shift + Dual
	Cable/SAT		Green
	TV		Blue
	CD		Yellow
	Menu		Menu
	Harman Volume		Smart
	Exit		Exit
	Tone Control		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	1		1

Originalfernbedienung Ersatzfernbedienung

	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Shift + Exit
	Direct		Guide
	Vol+ Stereo		Vol +
	Vol- Stereo		Vol -
	CH/Tuner Down		Ch +
	CH/Tuner Up		Ch -
	Speaker 1		Options
	Speaker 2		Dual



