 

 



 

 
 
 









 





 
 

 
 

 

 


 
 




Originalfernbedienung Ersatzfernbedienung

 


 





 
 


	DVD Power		Power
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide
	Prog/Direct		Sleep
	Call		Pre Ch
	Clear		Exit
	Random		Media

Originalfernbedienung Ersatzfernbedienung

	Subtitle		Subt
	Audio		Dual
	Repeat		Text
	A-B Repeat		AV
	Menu		Menu
	Top Menu/PBC		Shift + Menu
	Angle		Red
	Return		Back
	Up		Up
	Enter		Ok
	Down		Down
	Right		Right
	Left		Left
	Display		Info
	Stop		Stop
	Still/Pause		Pause
	Play		Play





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 << Slow/Search	 <<		
 >> Slow/Search	 >>		
 I<< Skip	 I<<		
 >>I Skip	 >>I		
 NTSC/PAL	 Format		
 Setup	 Options		
 Zoom	 Shift + Eject		
 Slide Show	 Smart		

