

Originalfernbedienung Ersatzfernbedienung

	USB		1
	COAXIAL		2
	OPTICAL		3
	LINE 1/2		4
	UP		Up
	Left / I<<<		I<<<
	Left / I<<		I<<
	Left / I<<		Left
	SELECT		Ok
	Right / >>>I		>>>I
	Right / >>>I		>>>
	Right / >>>I		Right
	DOWN		Down
	PLAY/PAUSE		Play
	PLAY/PAUSE		Pause
	MENU		Menu
	SHUFFLE		Info

Originalfernbedienung Ersatzfernbedienung

	REPEAT		Text
	VIDEO		Media
	MUTING		Mute
	VOLUME+		Vol +
	VOLUME-		Vol -

