














 

 

 

 
















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	DVD		Blue
	Tuner		Green
	USB		Yellow
	AUX		Red
	Open/Close		Eject
	Sleep		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0








 

 
 

Originalfernbedienung Ersatzfernbedienung

	Remain		Smart
	Cancel		Media
	I<<		I<<
	>>I		>>I
	<<		<<
	>>		>>
	Stop		Stop
	Play		Play
	Pause		Pause
	Step		Options
	Repeat		Text
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Tuning Up		Ch +
	Tuning Down		Ch -
	Menu		Menu





Originalfernbedienung	Ersatzfernbedienung
-----------------------	---------------------

	Return		Back
	Up / Preset Up		Up
	Down / Preset		Down
	Right / Seek Up		Right
	Left / Seek Down		Left
	Enter		Ok
	Audio		List
	Subtitle		Subt
	Info		Info
	Exit		Exit
	Virtual Sound		Dual
	EQ		3D
	Zoom/Mo/ST		Shift + Eject
	Angle/Autoscan		Guide

Originalfernbedienung	Ersatzfernbedienung
-----------------------	---------------------