



 



 



 

 

 
 

 
 

 
 
 
 
 





 


 
 

 


 


 

 

 

 
 


 
 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV Power		Shift + Power
	TV TV/AV		Shift + AV
	TV Vol+		Shift + Vol +
	TV Vol-		Shift + Vol -
	TV CH+		Shift + Ch +
	TV CH-		Shift + Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

	-/--		Guide
	Showview		Smart
	Timer Rec		AV
	TRACKING/V-LOC		Ch +
	TRACKING/V-LOC		Ch -
	Menu		Menu
	Exit		Exit
	Up		Up
	Left		Left
	Right		Right
	Down		Down
	Cancel		Back
	Store		Media
	OSD		Options
	Display		Info
	Reset		3D
	Play		Play





Originalfernbedienung Ersatzfernbedienung

	<<		<<
	>>		>>
	Stop		Stop
	Pause / Still		Pause
	Still Adv		>>
	Rec		Rec
	Void 1		Red
	Void 2		Green

Originalfernbedienung Ersatzfernbedienung

