






Originalfernbedienung Ersatzfernbedienung

	Source		AV / Input / RDS
	Power		Power
	Mute		Mute / Dimmer
	TXT		Text / Goto
)) []		Audio / Lang I/II
	Rec		Rec / Rec Mode
	[>]		Eject / Surround
	Stop		Stop / Hold
	Play/Pause		Play / Slow
	Play/Pause		Pause / Step / Freeze
	<<		<< / Tune-
	<<		I<< / Preset-
	>>		>> / Tune+
	>>		>>I / Preset+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat

Originalfernbedienung Ersatzfernbedienung

	Blue		Blue / Prime Video / Random
	_		Sound / Title
	Del		Exit / Cancel / Clear
	Vol+		Vol+
	Home		Menu / Home
	CH+		CH+ / Page+
	Vol-		Vol-
	Mouse		Smart / List
	CH-		CH- / Page-
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Settings		Setup / OPT /
	Back		Back / Return
	EPG		Guide / EPG / -/-





Originalfernbedienung Ersatzfernbedienung

RECALL	Recall	PC FAV MARKER	Fav / Marker / PC
FAV	FAV	SHIFT + PC FAV MARKER	Shift + Fav / Marker / PC
INFO	Info	ANGLE INFO	Info / Angle
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD - STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
	Subtitle	EQ SUBTITLE	Subtitle / EQ
0	0	HDMI - BAT 0	0
	Format	FORMAT PICTURE	Picture / Format

Originalfernbedienung Ersatzfernbedienung

