




 
 
 
 
 
 
 










 



 


 
 



 
 
 

Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Tape/Deck 1/2			Blue
	Play		Play
	<<		<<
	>>		>>
	Stop		Stop
	Rec/Rec Mute		Rec
	Pause		Pause
	Power		Power
Volume Down			Vol -
Volume Up			Vol +




**Originalfernbedienung    Ersatzfernbedienung**

Power ON/Off		Power
Mute		Mute
Every Pop		Play
Tape 1 Stop		Stop
Preset Pause		Rec
Vol Rs-/Effect		Subt
Sleep		Sleep
CD Random		TV/R
Tape 2 Pre./eq		D. Menu
Repeat		Text
Vol Rs+/S.Mode		Eject
Input/Source		AV
CD/Theater		Menu
CD Play		Up
Display		Info
CD Rewind		Left
Stop		Ok

**Originalfernbedienung    Ersatzfernbedienung**

CD F.FWD		Right
Funct./Direct		Exit
CD Pause		Down
Woofer/Speed		Back
Volume+		Vol +
Volume-		Vol -
Tape 1 Hall/Ats		Media
Pr 1		1
Pr 2		2
Pr 3		3
Pr 4		4
Pr 5		5
Pr 6		6
Pr 7		7
Pr 8		8
Pr 9		9
Mode		Guide




**Originalfernbedienung   Ersatzfernbedienung**

Pr 0/10		0
Program		Pre Ch
Tape 1 Rec		Red
Tape 1 Rew		Green
Tape 1 Play		Yellow
Tape 1 F.FWD		Blue
Edit	+	Shift + Text
Fm Mode/Disc	+	Shift + Menu
Tuner/Bypass	+	Shift + Exit
Disc 1 Eject	+	Shift + 1
Disc 2	+	Shift + 2
Disc 3 Eject	+	Shift + 3
6 Ch/Geq	+	Shift + 6
+10/Next Sv+V	+	Shift + Guide

**Originalfernbedienung   Ersatzfernbedienung**