



 



 















 
 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	TV/SAT		AV
	SAT		Smart
	TV		Media
	Radio		TV/R
	Recall		Back
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

	Text		Text
	FAV		Pre Ch
	P-		Ch -
	P+		Ch +
	Info		Info
	Up		Up
	Left		Left
	OK		Ok
	OK		Shift + Ok
	Right		Right
	Down		Down
	Menu		Menu
	Exit		Exit
	Red / Lang		Red
	Red / Lang		Dual
	Green / Pause		Green
	Green / Pause		Pause





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 SOUND Yellow / Sound	 C Yellow		
 SOUND Yellow / Sound	 SHIFT +  SOUND Shift + Dual		
 EPG Blue / EPG	 D Blue		
 EPG Blue / EPG	 -/~/ GUIDE Guide		

