



















 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	[+]		Display / Media
	Mute		Mute / Dimmer
	Tv/AV		AV / Input / RDS
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Vol+		Vol+
	Vol-		Vol-
	Timer		Sleep / Timer
	1		1
	N		D.Menu / Top
	F		Menu / Home
	2		2
	3		3
	4		4

Originalfernbedienung Ersatzfernbedienung

	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Guide / EPG / -/--
	0/VCR		0
	0/VCR		Shift + 4
	Red		Red / Netflix / Search
	C		Exit / Cancel / Clear
	Green		Green / APP / Repeat
	Blue		Blue / Prime Video / Random
	Hold		Shift + Stop /
	Yellow		Yellow / YouTube / Repeat
	Index		Info / Angle
	Pause/Step		Pause / Step / Freeze
	Reveal		Smart / List





Originalfernbedienung Ersatzfernbedienung

	Time Text		TV/Radio /
	Play		Play / Slow
	Tv/Text		Text / Goto
	Stop		Stop / Hold
	>>		>> / Tune+
	<<		<< / Tune-
	Rec		Rec / Rec Mode
	F/T/B		Zoom / Size
	Power VCR	+	Shift + Power
	Programme Up		CH+ / Page+
	Programme Down		CH- / Page-

Originalfernbedienung Ersatzfernbedienung

