 


 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------------|---|----------------|
|  | Power On |  | Power |
|  | Power Off |  | Shift + Power |
|  | Zone Device On |  | Smart |
|  | Zone Device Off |  | Shift + Smart |
|  | Net/USB |  | Shift + 1 |
|  | iPod |  | Shift + 2 |
|  | DVD |  | Shift + 3 |
|  | BD |  | Shift + 4 |
|  | Tuner/DTU |  | Shift + 5 |
|  | Dock |  | Shift + 6 |
|  | SAT TU |  | Shift + 7 |
|  | SAT/CBL |  | Shift + 8 |
|  | Game |  | Shift + 9 |
|  | V.AUX |  | Shift + Guide |
|  | Phono |  | Shift + 0 |
|  | CD |  | Shift + Pre Ch |
|  | DVR |  | Blue |

Originalfernbedienung Ersatzfernbedienung




 














 
 

 
 


 
 



 

| | | | |
|---|--------------------------|---|---------------|
|  | TV |  | Shift + Media |
|  | Monitor Select |  | Media |
|  | Quick Select 1 |  | Red |
|  | Quick Select 2 (SAT/CBL) |  | Green |
|  | Quick Select 3 (Dock) |  | Yellow |
|  | CH+ |  | Ch + |
|  | CH- |  | Ch - |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Mute |  | Mute |
|  | Source Select |  | AV |
|  | Menu |  | Menu |
|  | CH Level/Top |  | Info |
|  | Search/Setup |  | Options |
|  | Return |  | Back |
|  | Up |  | Up |
|  | Down |  | Down |




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|--------|
|  | Right |  | Right |
|  | Left |  | Left |
|  | Enter |  | Ok |
|  | <</Band |  | << |
|  | Play |  | Play |
|  | >>/Mode |  | >> |
|  | I<</Tuning- |  | I<< |
|  | Pause |  | Pause |
|  | Stop |  | Stop |
|  | >>I/Tuning+ |  | >>I |
|  | Multeq |  | Subt |
|  | Dyn EQ/Vol |  | Text |
|  | A-DSX |  | TV/R |
|  | Restorer |  | Exit |
|  | Standard |  | Dual |
|  | D/ST |  | Format |
|  | Simulation |  | 3D |

 

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------------|---|--------------|
|  | Pure |  | Pre Ch |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
| | +10/Memory |  | Guide |
| | Shift/Link Menu |  | D. Menu |
|  | Power Tv |  | Shift + TV/R |
|  | Input Tv |  | Shift + AV |
|  | Sleep |  | Sleep |
|  | Party |  | List |







Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------------|---|---------------|
|  | Power On |  | Power |
|  | Power Off |  | Shift + Power |
|  | Zone Device On |  | Smart |
|  | Zone Device Off |  | Shift + Smart |
|  | Net/USB |  | Shift + 1 |
|  | iPod |  | Shift + 2 |
|  | DVD |  | Shift + 3 |
|  | BD |  | Shift + 4 |
|  | Tuner/DTU |  | Shift + 5 |
|  | Dock |  | Shift + 6 |
|  | SAT TU |  | Shift + 7 |
|  | SAT/CBL |  | Shift + 8 |
|  | Game |  | Shift + 9 |
|  | V.AUX |  | Shift + Guide |
|  | Phono |  | Shift + 0 |
|  | CD |  | Pre Ch |
|  | DVR |  | Blue |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------------------|---|---------|
|  | TV |  | Media |
|  | Quick Select 1 |  | Red |
|  | Quick Select 2 (SAT/CBL) |  | Green |
|  | Quick Select 3 (Dock) |  | Yellow |
|  | CH+ |  | Ch + |
|  | CH- |  | Ch - |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Mute |  | Mute |
|  | Menu |  | Menu |
|  | CH Level/Top |  | Info |
|  | Search/Setup |  | Options |
|  | Return |  | Back |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|-------|
|  | Enter |  | Ok |
|  | <</Band |  | << |
|  | Play |  | Play |
|  | >>/Mode |  | >> |
|  | I<</Tuning- |  | I<< |
|  | Pause |  | Pause |
|  | Stop |  | Stop |
|  | >>I/Tuning+ |  | >>I |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |

 

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------------|---|---------|
|  | 0 |  | 0 |
|  | +10/Memory |  | Guide |
|  | Shift/Link Menu |  | D. Menu |
|  | Power Tv |  | TV/R |
|  | Input TV |  | AV |
|  | Sleep |  | Sleep |
|  | Party |  | List |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |







Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------------|---|---------------|
|  | Power On |  | Power |
|  | Power Off |  | Shift + Power |
|  | Zone Device On |  | Smart |
|  | Zone Device Off |  | Shift + Smart |
|  | Net/USB |  | Shift + 1 |
|  | iPod |  | Shift + 2 |
|  | DVD |  | Shift + 3 |
|  | BD |  | Shift + 4 |
|  | Tuner/DTU |  | Shift + 5 |
|  | Dock |  | Shift + 6 |
|  | SAT TU |  | Shift + 7 |
|  | SAT/CBL |  | Shift + 8 |
|  | Game |  | Shift + 9 |
|  | V.AUX |  | Shift + Guide |
|  | Phono |  | Shift + 0 |
|  | CD |  | Pre Ch |
|  | DVR |  | Blue |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------------------|---|---------|
|  | TV |  | Media |
|  | Quick Select 1 |  | Red |
|  | Quick Select 2 (SAT/CBL) |  | Green |
|  | Quick Select 3 (Dock) |  | Yellow |
|  | CH+ |  | Ch + |
|  | CH- |  | Ch - |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Mute |  | Mute |
|  | Menu |  | Menu |
|  | CH Level/Top |  | Info |
|  | Search/Setup |  | Options |
|  | Return |  | Back |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |

 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|-------|
|  | Enter |  | Ok |
|  | <</Band |  | << |
|  | Play |  | Play |
|  | >>/Mode |  | >> |
|  | I<</Tuning- |  | I<< |
|  | Pause |  | Pause |
|  | Stop |  | Stop |
|  | >>I/Tuning+ |  | >>I |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |

 



 




 



 
 

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------------|---|---------|
|  | 0 |  | 0 |
|  | +10/Memory |  | Guide |
|  | Shift/Link Menu |  | D. Menu |
|  | Power Tv |  | TV/R |
|  | Input Tv |  | AV |
|  | Party |  | List |
|  | Sleep |  | Sleep |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |


 

 
 
 
 











 



















Originalfernbedienung Ersatzfernbedienung


 

 
 

 


 

 

 


 
 
 
| | | | |
|---|-----------------|---|---------------|
|  | Power On |  | Power |
|  | Power Off |  +  | Shift + Power |
|  | Zone Device On |  | Smart |
|  | Zone Device Off |  +  | Shift + Smart |
|  | NET/USB |  +  | Shift + 1 |
|  | iPod |  +  | Shift + 2 |
|  | DVD |  +  | Shift + 3 |
|  | BD |  +  | Shift + 4 |
|  | Tuner/DTU |  +  | Shift + 5 |
|  | Dock |  +  | Shift + 6 |
|  | SAT TU |  +  | Shift + 7 |
|  | SAT/CBL |  +  | Shift + 8 |
|  | Game |  +  | Shift + 9 |
|  | V.AUX |  +  | Shift + Guide |
|  | Phono |  +  | Shift + 0 |
|  | CD |  | Pre Ch |
|  | DVR |  | Blue |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------------------|---|---------|
|  | TV |  | Media |
|  | Quick Select 1 |  | Red |
|  | Quick Select 2 (SAT/CBL) |  | Green |
|  | Quick Select 3 (Dock) |  | Yellow |
|  | CH+ |  | Ch + |
|  | CH- |  | Ch - |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Mute |  | Mute |
|  | Search/Setup |  | Options |
|  | <</Band |  | << |
|  | Play |  | Play |
|  | >>/Mode |  | >> |
|  | I<</Tuning- |  | I<< |
|  | Pause |  | Pause |
|  | Stop |  | Stop |
|  | >>/Tuning+ |  | >>I |




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------------|---|---------|
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | +10/Memory |  | Guide |
|  | Power Tv |  | TV/R |
|  | Shift/Link Menu |  | D. Menu |
|  | Input Tv |  | AV |
|  | Sleep |  | Sleep |
|  | Party |  | List |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

