


 

 
 
 

 
 
 

 









 





 






 
 
 
 
 




 
 






 

 







 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV - Gids		List
	Extra		Options
	Comm.		Subt
	TV - Theek		Dual
	Home		Smart
	Mute		Mute
	Help		Info
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	Delete		3D
	Exit		Exit
	Back		Back
	<<		<<
	>>		>>
	Pause		Pause
	Play		Play
	Rec		Rec
	Stop		Stop
	Text		Text
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	1		1
	2		2
	3		3





Originalfernbedienung Ersatzfernbedienung

4 ghi	4	4	4
5 jkl	5	5	5
6 mno	6	6	6
7 pqrs	7	7	7
8 tuvw	8	8	8
9 wxyz	9	9	9
0	0	0	0
-/--	-/--	GUIDE	Guide
. □→	. □→	TIMER AV	AV

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	. □ →		AV
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -

Originalfernbedienung Ersatzfernbedienung

