






 



 


 


 

 


 




 

 








Originalfernbedienung Ersatzfernbedienung




 





 
 
	Power		Power
	Open/Close		Eject
	FM Mode		TV/R
	Tuner Memory		Format
	Repeat		Text
	Theatre Sync		Shift + Power
	Timer Menu		Smart
	Sleep		Sleep
	Display		Info
	Time/Text		AV
	Dimmer		Media
	Function+		Ch +
	Function-		Ch -
	Picture Navi		List
	Audio		Dual
	Subtitle		Subt
	Angle		Options

Originalfernbedienung Ersatzfernbedienung

	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	Folder+		Shift + Ch +
	Folder-		Shift + Ch -
	DVD Top Menu		Menu
	DVD/USB Menu		D. Menu
	EQ		3D
	Return		Back




Originalfernbedienung Ersatzfernbedienung

 


 
 
 



 



 
 


 
 
 
 

 





 Display/[*]	 +  Shift + Info
	
	
	
	
 Enter	 Ok
 Volume+	 Vol +
 Volume-	 Vol -
 I<</Preset-	 I<<
 <-/Replay/<II Step	 Guide
 ->/Advance/Step II>	 Pre Ch
 >>I/Preset+	 >>I
 <</Tuning -/<I	 <<
 Play	 Play
 >>/Tuning	 >>
 Pause	 Pause
 Stop	 Stop

Originalfernbedienung Ersatzfernbedienung

 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Tv/Video		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10/0		0
	-/-		Guide
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -

Originalfernbedienung Ersatzfernbedienung

	Enter		Ok

