






Originalfernbedienung Ersatzfernbedienung

	On		Power
	Off		Shift + Power
	Mute		Mute / Dimmer
	AVR		Shift + Smart / List
	DVD		Shift + 2
	VID1		Shift + 1
	HDMI1		Shift + Guide / EPG / -/-
	AM/FM		Shift + 6
	CD		Shift + 3
	VID2		Shift + 4
	HDMI2		Shift + 0
	AUX		Shift + 7
	Tape		Shift + 5
	VID3		Shift + 8
	HDMI3		Shift + Fav / Marker / PC
	Sleep		Sleep / Timer
	6CH		Shift + 9

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	Surr.		Eject / Surround
	Test		Text / Goto
	Vol-		Vol-
	CH.		Guide / EPG / -/-
	Up		Up
	SPKR		Menu / Home
	Left		Left
	OK		OK
	Right		Right
	Digital		Picture / Format
	Down		Down
	Delay		Fav / Marker / PC
	1		1
	2		2
	3		3
	4		4



