



Originalfernbedienung Ersatzfernbedienung

	POWER		Power
	Auto Setup		Auto
	INPUT		Comp / Video
	Input Network		Source
	INPUT VIDEO		Shift + Comp / Video
	Page+		Shift + Vol + / Page +
	Page-		Shift + Vol - / Page -
	MENU		Menu
	RETURN		Shift + Menu
	UP		Up
	LEFT		Left
	ENTER		Enter
	RIGHT		Right
	DOWN		Down
	FREEZE		Freeze / Timer
	AV MUTE		Blank / Mute
	DEFAULT		Volt / Focus

Originalfernbedienung Ersatzfernbedienung

	Computer		3D / Invert
	INDEX WINDOW		Eco / Aspect
	Multi Live		Help / Info
	Function		Mode
	ZOOM+		+ / Play
	ZOOM-		- / Stop
	VOL+		Vol + / Page +
	VOL-		Vol - / Page -

