




 










 

 













Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Recall		Back
	Sleep		Sleep
	Audio		Dual
	Aspect		3D

Originalfernbedienung Ersatzfernbedienung

	Input		AV
	Info		Info
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Menu		Menu
	Exit		Exit
	Vol+		Vol +
	Vol-		Vol -
	FAV		Pre Ch
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	CH+		Ch +
	CH-		Ch -
	Red		Red








 




Originalfernbedienung Ersatzfernbedienung

	Green		Green
	Yellow		Yellow
	Blue		Blue
	Home		Smart
	Setup		Options
	Mouse		D. Menu
	EPG		Shift + Guide
	Text		Text
	Stop/Reveal		Stop
	Play/Pause / Mix		Play
	Play/Pause / Mix		Pause
	Index		List
	<</Hold		<<
	>>/Subpage		>>
	I<< / Size		I<<
	I<< / Size		Format
	>>I/Cancel		>>I

Originalfernbedienung Ersatzfernbedienung

	Tv/Radio		TV/R
	Rec		Rec
	T-Shift		Media
	Sub-T		Subt

