


 

 



 


 







 




 












Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Display		Info
	Recall		Back
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	Sleep		Sleep

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	Exit		Exit
	Text		Text
	FAV		Pre Ch
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Vol+		Vol +
	Vol-		Vol -
	Source		AV
	EPG		Guide
	CH+		Ch +
	CH-		Ch -
	Red		Red
	Green		Green


 






Originalfernbedienung    Ersatzfernbedienung

	Yellow		Yellow
	Blue		Blue
	Play		Play
	Pause		Pause
	<<		<<
	>>		>>
	Rec		Rec
	Stop		Stop
	I<<		I<<
	>>I		>>I
	Tv/Radio		TV/R
	Subpage		Eject
	Subtitle		Subt
	Reveal		3D
	Audio		Dual
	Size		Format
	Hold		Options

Originalfernbedienung    Ersatzfernbedienung

	Index		List
	Home		Smart

